

THE PROCESS OPTIMIZATION COMPANY **CSI**



WebTRAC

Log Charting & Reporting

Graphical Displays

Customized Plant Diagram

Web Browser Interface

Alarm & Audit Trails

Email Notification

Scalable



Versatile

Accessible

Secure

Simple

Real-Time Access & Control

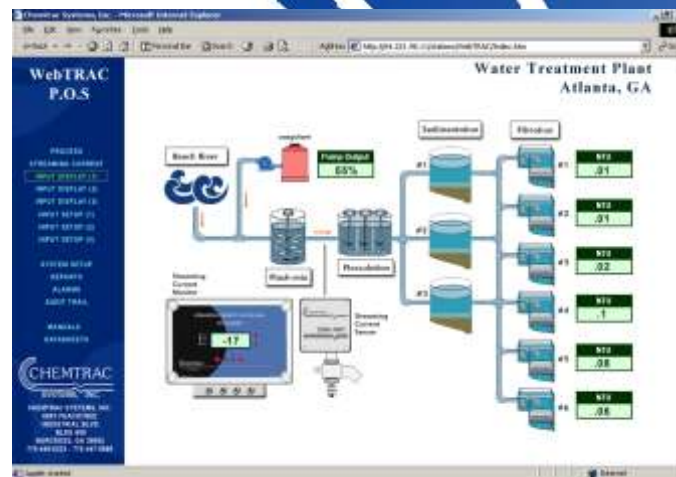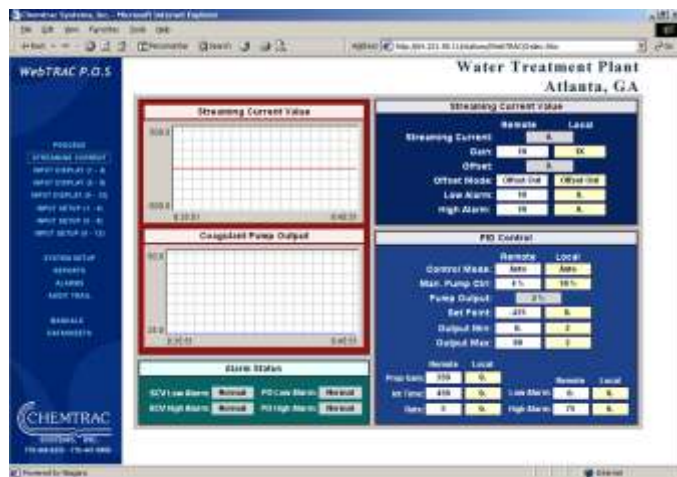

Web Based Monitoring, Control, & Data Acquisition

6991 Peachtree Industrial
Boulevard, Building 600
Norcross, GA 30092
USA

PH: 770.449.6233
US: 800.442.8722
FX: 770.447.0889



PROCESS OPTIMIZATION SOLUTIONS


WebTRAC

What is WebTRAC™ ?

WebTRAC is Chemtrac's process monitoring and control system that offers the benefits of a SCADA system for a fraction of the cost. The WebTRAC system includes a graphical user interface that resides in the Web Access Controller (WAC) and remote I/O modules to interface to field instrumentation. WebTRAC can be customized to perform monitoring and control functions of any typical plant application. WebTRAC's versatility allows secured accessibility via a Local Area Network (LAN), Wide Area Network (WAN), Internet, telephone line, or direct PC connection. WebTRAC uses standard Internet Browsers and open industry standard protocols to create a common environment that connects and shares information. WebTRAC is scalable to allow an unlimited number of inputs and outputs.

Features:

- Local or Remote Access
- Real Time Data
- Graphical User Interface via Standard Internet Browser
- Multiple Security Levels/Restrictions
- Simultaneous Multiple User Connections
- Remote Diagnostics and Maintenance
- Data Logging and Audit Trail
- Auto Reporting
- Alarm Notification
- Remote I/O Module:
 - Analog Inputs (0-5Vdc, 0-10Vdc, or 4-20mA)
 - Analog Outputs (0-10Vdc, 4-20mA)
 - Digital Inputs (Dry Contacts)
 - Digital Outputs (Relays)

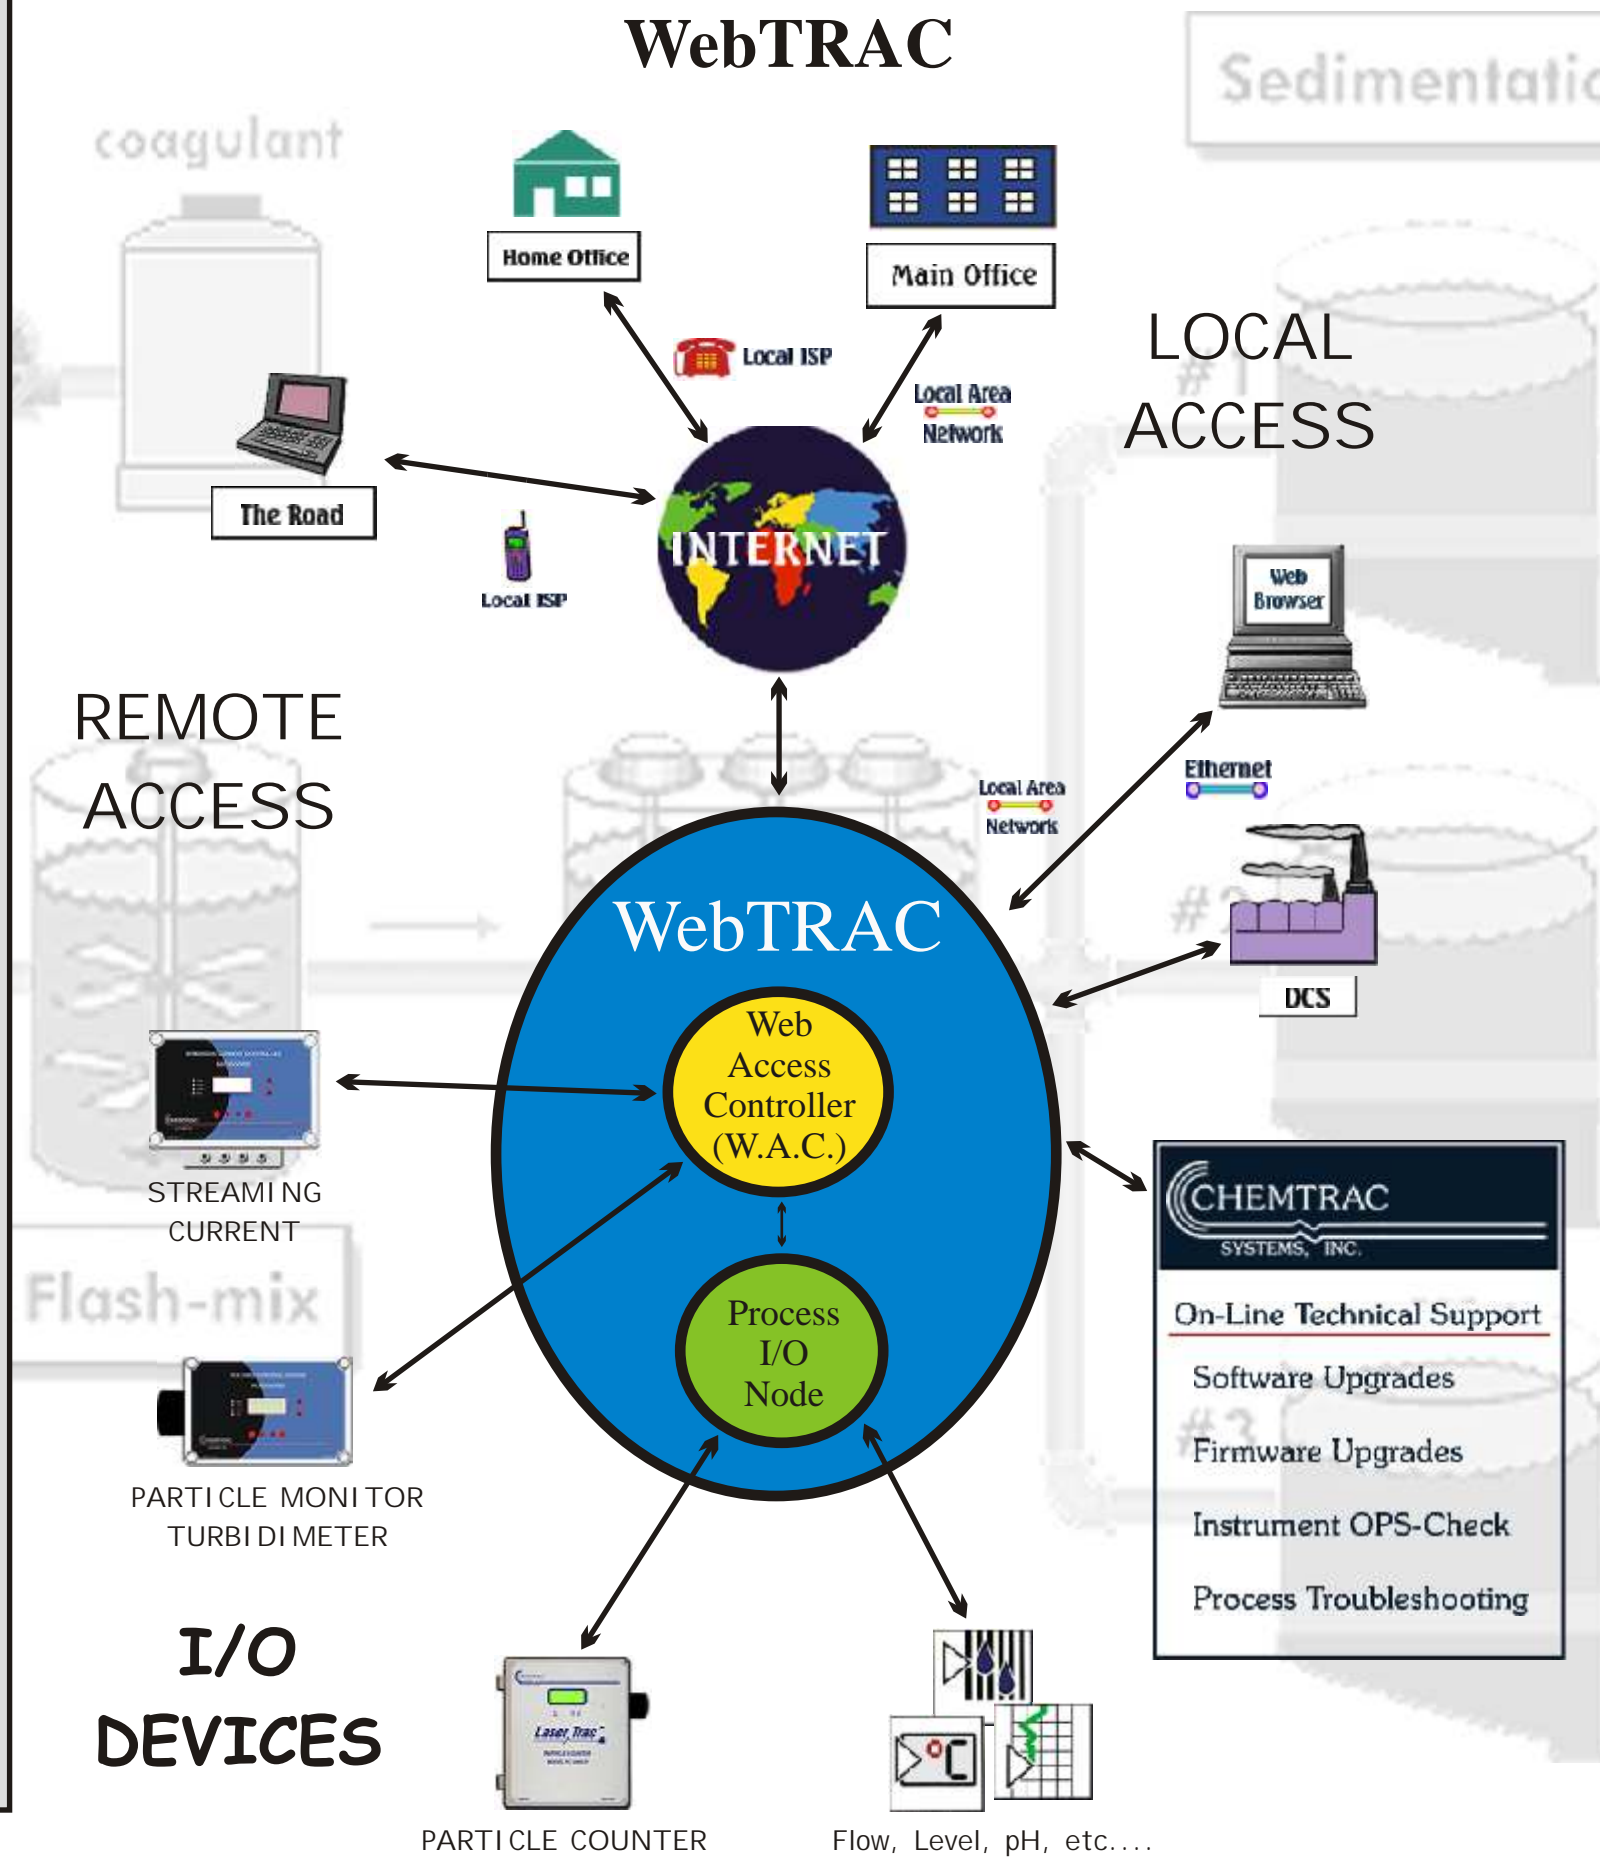

Custom Process Diagram

Multi-Level Security: Only those with the Appropriate USER NAME & PASSWORD can Access the System

Real Time Data Viewing & Charting

FOR A FULL INTERACTIVE DEMO VISIT US AT www.chemtrac.com AND FOLLOW THE WebTRAC LINK! OR SETUP A LIVE WEBCAST DEMO WITH OUR STAFF chemtrac@chemtrac.com Phone: 770-449-6233 Fax: 770-447-0889

CHEMTRAC
SYSTEMS, INC.

On-Line Technical Support

- Software Upgrades
- Firmware Upgrades
- Instrument OPS-Check
- Process Troubleshooting